



COMPOSITE CIRCUIT DIAGRAM — ALL MODELS AND MARKETS —

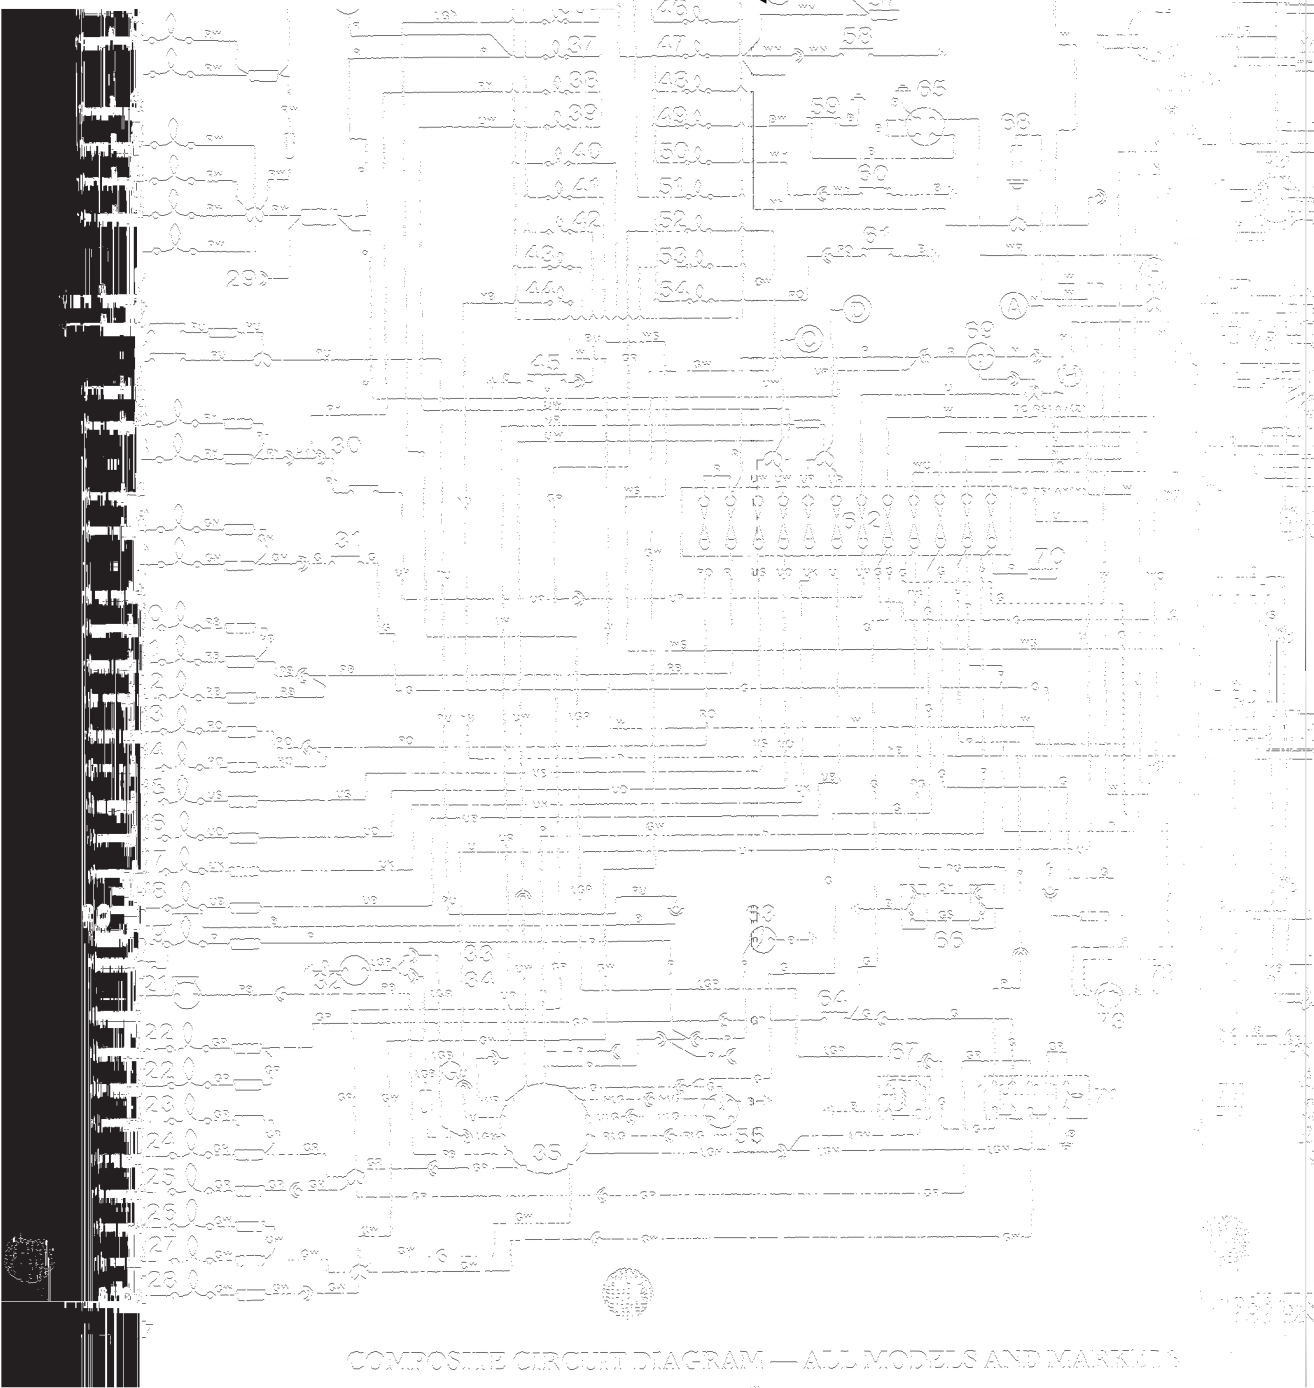

COMPOSITE CIRCUIT DIAGRAM — ALL MODELS AND MARKETS

ELECTRICAL EQUIPMENT — CIRCUIT DIAGRAM

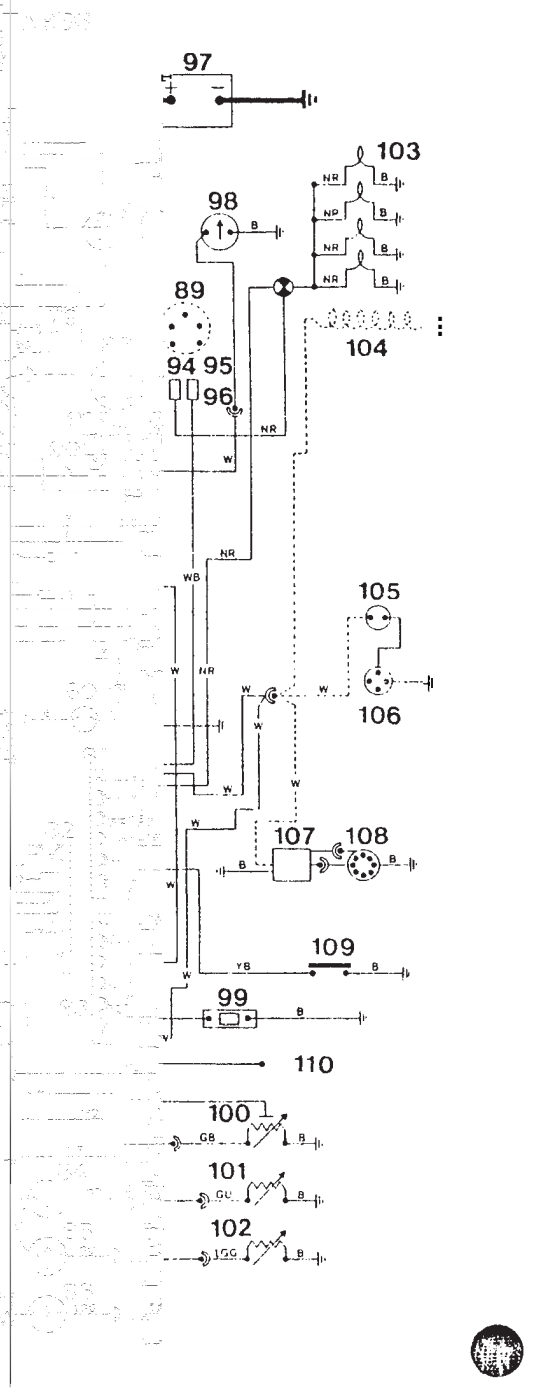

KEY TO COMPOSITE CIRCUIT DIAGRAM

- | | | |
|---|---|--|
| 1. Battery condition indicator illumination | 38. Rear fog warning light | 74. Start relay |
| 2. Cigar lighter illumination | 39. Main beam warning light | 75. Spares |
| 3. Oil temperature indicator illumination | 40. Spare | 76. Auxiliary instrument illumination |
| 4. Water temperature indicator illumination | 41. Low fuel warning light | 77. Spare auxiliary instrument |
| 5. Fuel indicator illumination | 42. Locked 4WD warning light | 78. Spare |
| 6. Speedometer illumination | 43. Spare | 79. Starter inhibitor switch (auto only) |
| 7. Door switches (when fitted) | 44. Cold start warning light | 80. Fuel pump (petrol only) |
| 8. Rear fog lamp | 45. Locked 4WD switch | 81. Connector — Diesel |
| 9. Reverse lamp | 46. Spare | 82. Connector — common |
| 10. Number plate lamp | 47. Oil warning light | 83. Connector — petrol |
| 11. LH tail lamp | 48. Ignition warning light | 84. Fuel indicator |
| 12. LH side lamp | 49. Brakes warning light | 85. Water temperature indicator |
| 13. RH tail lamp | 50. Park brake warning light | 86. Oil temperature indicator |
| 14. RH side lamp | 51. Spare | 87. Alternator |
| 15. LH headlamp main beam | 52. Direction indicator warning light | 88. Petrol ignition switch |
| 16. RH headlamp main beam | 53. Spare | 89. Diesel ignition switch |
| 17. LH headlamp dip beam | 54. Seat belt warning light | 90. Feed snap connector |
| 18. RH headlamp dip beam | 55. Wiper motor | 91. Feed snap connector |
| 19. Interior lamp (when fitted) | 56. Norwegian daytime running lights connection | 92. Ignition snap connector |
| 20. Interior lamp switch | 57. German fuel shut off and Norway connections | 93. Starter snap connector |
| 21. Horn | 58. Oil pressure switch | 94. Auxiliary snap connector |
| 22. Stoplamp | 59. Pressure differential warning actuator switch | 95. Heater snap connector |
| 23. LH side repeater | 60. Park brake switch (when fitted) | 96. Fuel shut-off snap connector |
| 24. LH front indicator | 61. Seat belt switch (when fitted) | 97. Battery |
| 25. LH rear indicator | 62. Fuses | 98. Battery condition indicator (when fitted) |
| 26. RH side repeater | 63. Clock (when fitted) | 99. Radio (when fitted) |
| 27. RH front indicator | 64. Stop lamp switch | 100. Tank unit — fortwin tanks system |
| 28. RH rear indicator | 65. Brake check relay | 101. Water temp transmitter |
| 29. Front fog feed | 66. Heater connections | 102. Oil temperature transmitter (when fitted) |
| 30. Rear fog switch | 67. Flasher unit | 103. Glow plugs (Diesel only) |
| 31. Reverse lamp switch | 68. Ignition light resistor | 104. Fuel shut off solenoid |
| 32. Washer pump | 69. Light switch | 105. (4 cylinder petrol only) coil |
| 33. RH washer pump connection | 70. Auxiliary | 106. Distributor (4 cylinder petrol only) |
| 34. LH washer pump connection | 71. Hazard unit | 107. 2 CE unit — V8 only |
| 35. Steering column switches | 72. Starter solenoid | 108. Distributor — V8 only |
| 36. Trailer warning light | 73. Cigar lighter (when fitted) | 109. Choke switch (petrol only) |
| 37. Side light warning light | a) Australia | 110. Air conditioning feed (when fitted) |
| | b) Rest of World | |

Key to cable colours

BBlack GGreen K Pink LLight N Brown OOrange P Purple R Red S Slate U Blue W White Y Yellow

 
The last letter of a colour code denotes the tracer colour




Connectors via **plug** and socket



Snap connectors



Permanent in-line connections

 


Earth connections via cables



Earth connections via fixing bolts

DIM-DIP CIRCUIT — UNITED KINGDOM ONLY

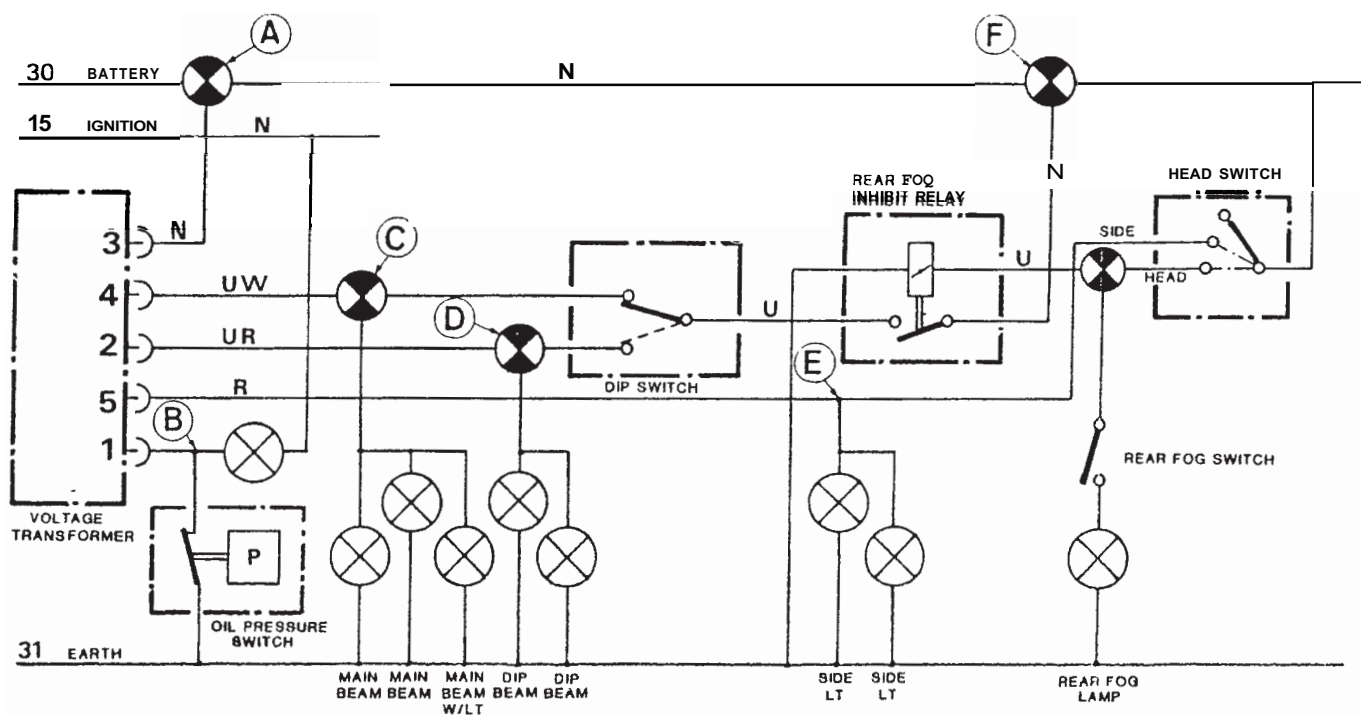

ST258

The in-line connections lettered **A**, **B**, **C**, **D**, **E** and **F** connect into the corresponding lettered connections in the main composite circuit diagram.