


# Television Controls

## CONTROLS

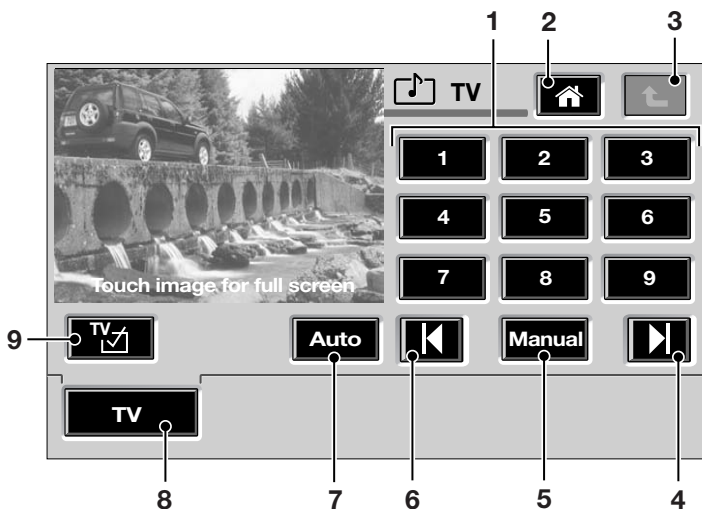

LAN0781ENG

1. Channel preset icons
2. Home menu icon
3. Return icon
4. Forwards/Next icon
5. Manual tuning icon
6. Backwards/Previous icon
7. Automatic tuning icon
8. TV select icon
9. TV country/format icon

**Note:** For occupant safety, when the vehicle is in motion or the parking brake is released, the TV picture is not displayed (but the audio signal can be heard).

## ANALOGUE/DIGITAL TELEVISION

To cope with the change from analogue to digital broadcasting, the TV tuner is able to receive both analogue and digital TV signals.


In various areas, both analogue and digital signal strengths will vary. When in an area of weak reception, you may experience poor picture and sound quality, or a blank screen and audio muting. It may be of benefit to retune the viewed station or possibly switch between analogue and digital TV stations. The analogue and digital stations have been combined into a single list.




# Channel Selection

## CHANNEL SELECTION

There are two methods of channel selection.

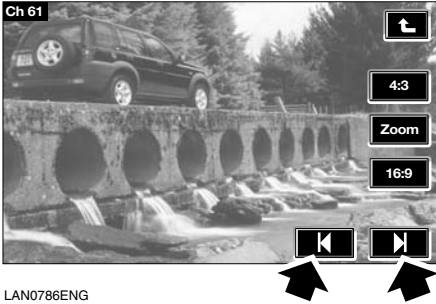

Once channels are stored, touch the full size TV image to access the icons and press the appropriate **Forwards/Next** or **Backwards/Previous** icon to select the desired channel.

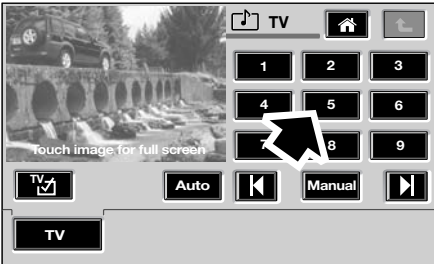


Alternatively, from the TV menu, press the appropriate channel preset icon (numbered 1-9).

# Storing Channels

## AUTOMATIC STATION SEARCH AND STORE

Up to 99 analogue or digital TV stations can be registered automatically in the Auto list.

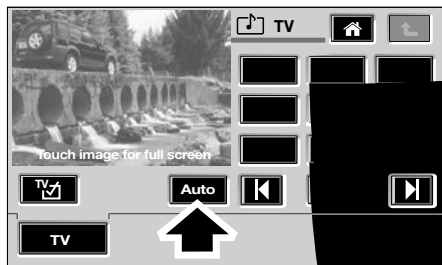



LAN0789ENG

Press the **Auto** icon to display the list of available stations.

Received stations are stored automatically and each assigned to a channel preset icon.

The stored stations are listed by name, in ascending alphanumeric order.

## Selecting an automatically stored station

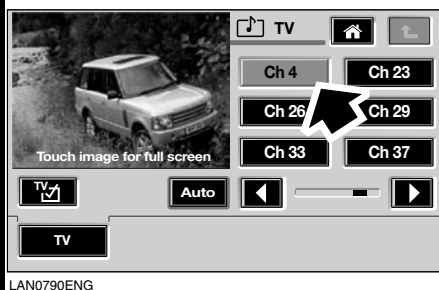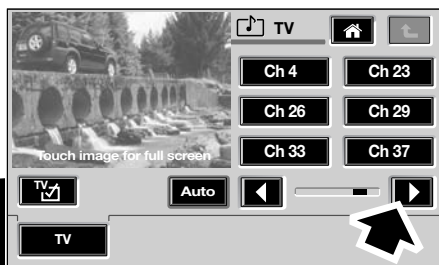

LAN0790ENG

Once a station is visible, press the channel preset icon.


To access the manual station menu, press the **Auto** icon.

# Storing Channels

## MANUAL STATION SEARCH AND STORE

Up to 9 TV stations can be stored manually as presets.

## Selecting a manually stored station



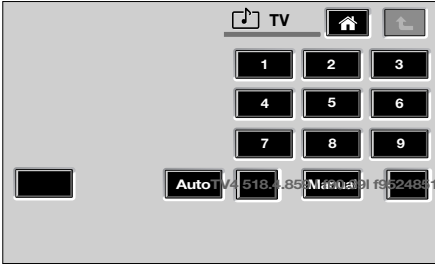


To subsequently select a stored station, press the required station preset icon.

1. Press the **Manual** icon to initiate the manual station search and store mode.
2. To manually search for a station, press the right or left arrow icon.
3. To assign and store the received station, press and hold one of the station preset icons, until a confirmation tone is heard. The station is now stored.

# Television Format


## ADJUSTING PICTURE FORMAT

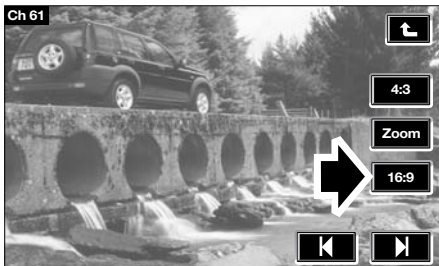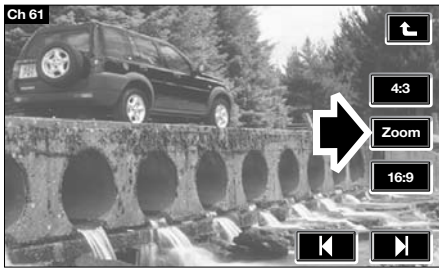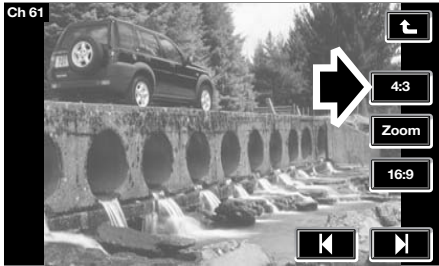

LAN0788ENG


To adjust the viewable picture format, press the appropriate icon, **4:3**, **Zoom** or **16:9**, for a proportional enlargement.

## SELECTING TV COUNTRY/FORMAT

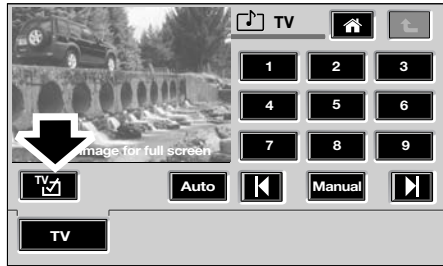

LAN0793ENG

Press the **TV Country/Format** icon to enter the format menu.

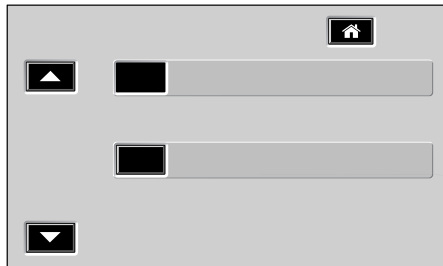

LAN0794ENG



To select the country in which you are driving, scroll up or down using either arrow icon and press the relevant country icon.

# Television Format

Not all countries use the same TV format. However, you can adapt your unit to accept the format of the country in which you are driving (PAL, SECAM, NTSC).

**Note:** During normal operation, the user should not need to adjust the format. Selection of the correct country of operation is sufficient.

To switch to the TV Format menu, press the **Format** icon.

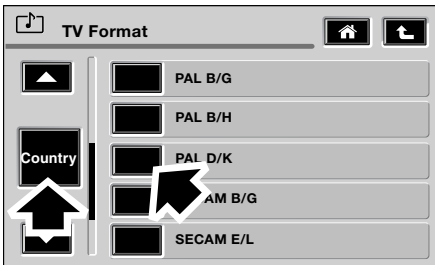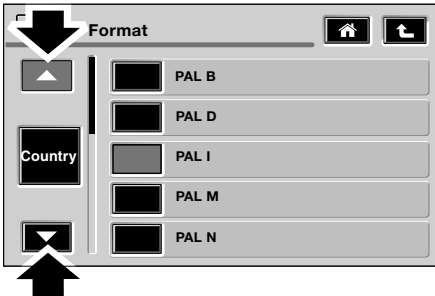

LAN0795ENG

Scroll up or down using either arrow icon and press the relevant TV format icon for your reception area.

To switch to the TV Country menu, press the **Country** icon.