

KEY TO V8 CYLINDER PETROL DIAGRAM

- | | | |
|--|---|---|
| <p>1. Speedometer illumination
 2. Fuel indicator illumination
 3. Water temperature illumination
 4. Rear fog lamps
 5. Nurnber plate lamp
 6. LH tail lamp
 7. LH side lamp
 8. RH tail lamp
 9. RH side lamp
 10. LH headlamp dip beam
 11. RH headlamp dip beam
 12. LH headlamp main beam
 13. RH headlamp main beam
 14. Interior lamp
 15. Stop lamp
 16. Horn
 17. LH side repeater
 18. LH front indicator
 19. LH rear indicator
 20. RH front indicator
 21. RH rear indicator
 22. RH side repeater
 23. Pick-off point for auxiliary instrument illumination
 24. Panel illumination switch
 25. Rear fog switch (when fitted)
 26. Interior light switch
 27. Washer pump
 28. Grouped warning lights (comprising items 29 to 42)
 29. Trailer warning light</p> | <p>30. Side light warning light
 31. Rear fog warning light
 32. Main beam warning light
 33. Spare position
 34. Low fuel warning light
 35. Locked four-wheel drive warning light
 36. Cold start warning light
 37. Oil warning light
 38. Charge warning light
 39. Brake warning light
 40. Park brake warning light
 41. Direction indicator warning light
 42. Seat belt warning light
 43. Locked four-wheel drive switch
 44. Clock (when fitted)
 45. LH Reversing lamp
 46. RH Reversing lamp
 47. Steering column switches
 48. Wiper motor
 49. Reversing lamp switch
 50. Pressure differential warning actuator switch
 51. Heater switch
 52. Stop lamp switch
 53. Flasher unit
 54. Oil pressure switch
 55. Brake check relay
 56. Park brake switch
 57. Pick-off point for front fog lamps (when fitted)</p> | <p>58. Light switch
 59. Fuses
 60. Heater motor
 61. Hazard switch
 62. Hazard switch illumination
 63. Ignition light resistor
 64. Starter solenoid
 65. Spare pick-off point
 66. Start relay
 67. Coil
 68. Distributor
 69. Pick-off point for auxiliary trailer
 70. Fuel indicator
 71. Water temperature indicator
 72. Oil pressure indicator
 73. Oil temperature indicator (when fitted)
 74. Battery
 75. Alternator
 76. Start switch
 77. Fuel pump
 78. Ballast resistor
 79. Battery condition indicator
 80. Pick-off piont for auxiliary instrument illumination
 81. Tank unit transmitter
 82. Water temperature transmitter
 83. Oil pressure transmitter
 84. Oil temperature transmitter
 85. Ignition module (when fitted)</p> |
|--|---|---|

Key to cable colours

BBlack **G**Green **K**Pink **L**Light **N**Brown **O**Orange **P**Purple **R**Red **S**Slate **U**Blue **W**White **Y**Yellow

The last letter of a colour code denotes the tracer colour



Connectors via plug and socket



Snap connectors



Permanent in-line connections



Earth connections via cables



Earth connections via fixing bolts